


## Frucosol SH-3000 Cutlery Dryer & Polisher Diagram

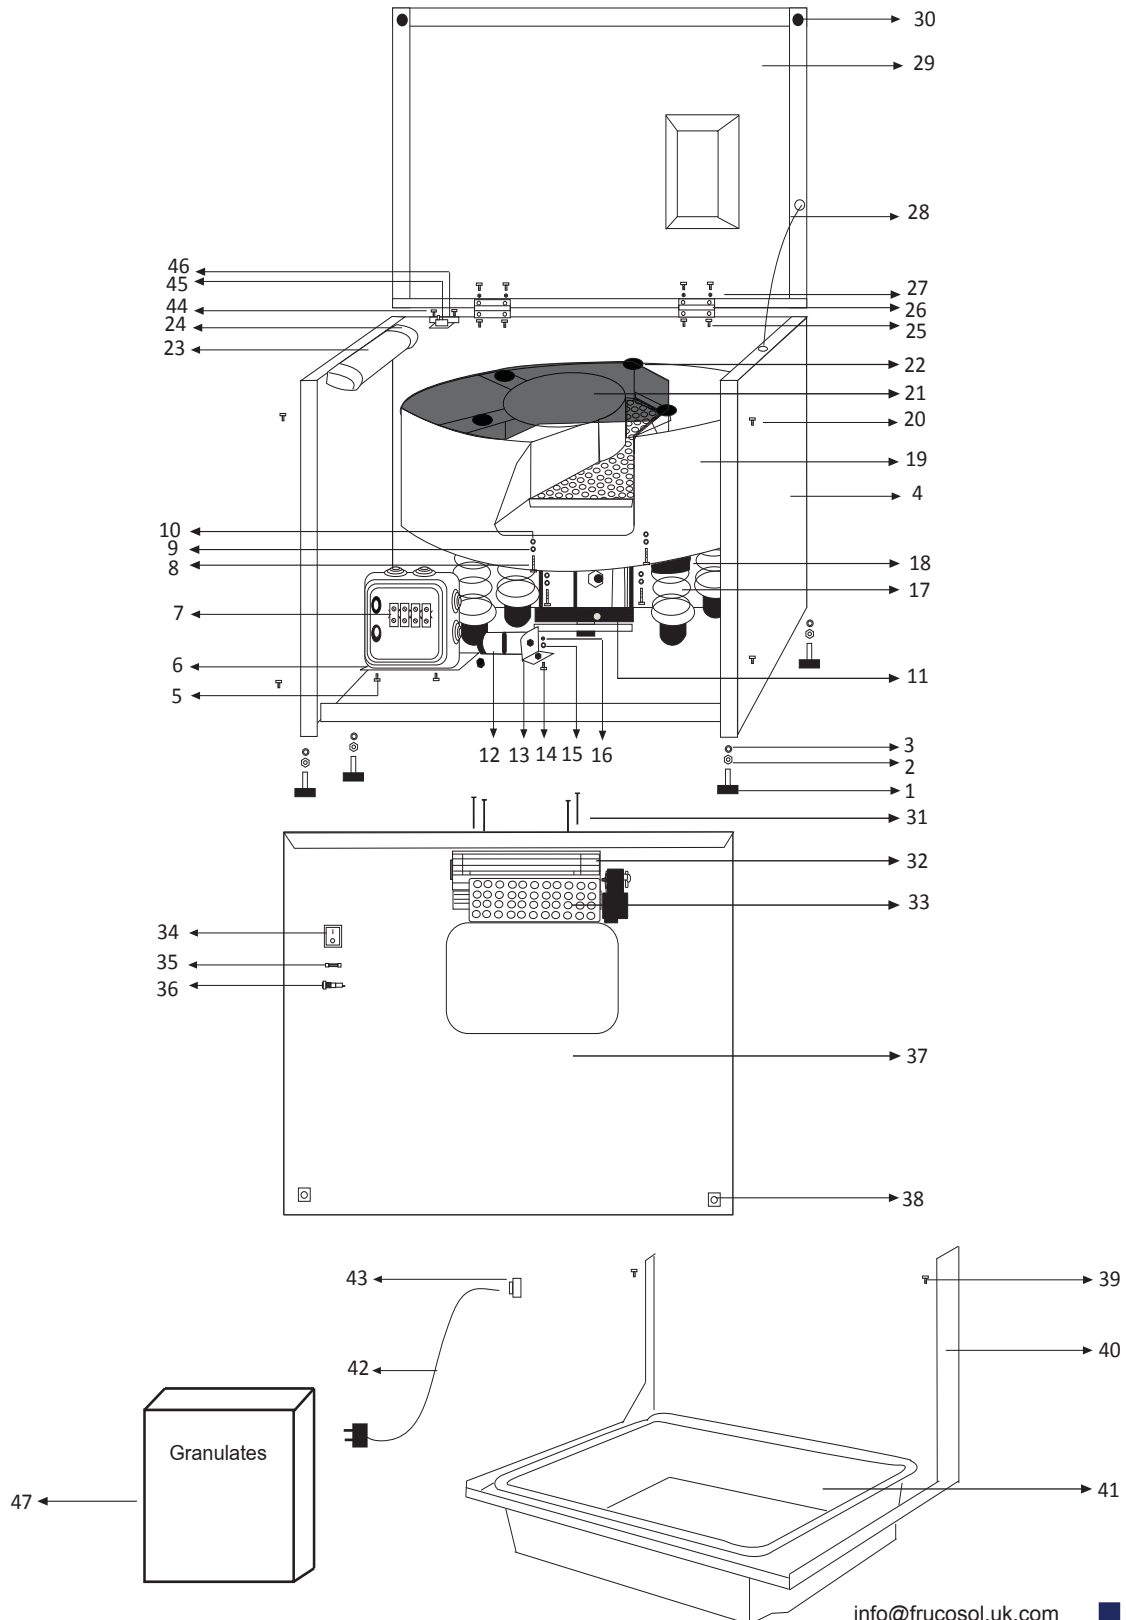

## Frucosol SH-3000 Cutlery Dryer & Polisher Diagram

REF	NO	Frucosol SH-3000 Cutlery Dryer & Polisher	Price
sh3000-001	1	Rubber foot	£10.10
sh3000-002	2	Nut M6	£1.40
sh3000-003	3	Washer M6	£1.20
sh3000-004	4	Base	POA
sh3000-005	5	Screw M5*10	£1.20
sh3000-006	6	Junction box support	POA
sh3000-007	7	Junction box	POA
sh3000-008	8	Screw M8*35	£1.20
sh3000-009	9	Washer M8	£1.20
sh3000-010	10	Grower washer M8	£1.40
sh3000-011	11	Motor	£660.00
sh3000-012	12	Capacitor	£44.00
sh3000-013	13	Capacitor support	POA
sh3000-014	14	Screw M5*10	£1.20
sh3000-015	15	Cushion M8	£1.20
sh3000-016	16	Nut M8	£1.40
sh3000-017	17	Bumper	£41.80
sh3000-018	18	Rubber bumper	£13.20
sh3000-019	19	Deposit	£990.00
sh3000-019x		Deposit X	£1,100.00
sh3000-019x1		Drilled exit area X	£88.00
sh3000-019x2		Curtains X	£33.00
sh3000-020	20	Screw M5*10	£1.20
sh3000-021	21	Deposit lid	£44.00
sh3000-021x		Deposit lid X	POA
sh3000-022	22	Black screw	£8.80
sh3000-023	23	Lamp	£81.40
sh3000-024	24	Lamp holder	£85.80
sh3000-025	25	Screw M5*10	£1.20
sh3000-026	26	Hinge	£44.00
sh3000-027	27	Washer M5	£1.20
sh3000-028	28	Stainless steel bumper	POA
sh3000-029	29	Lid	POA
sh3000-030	30	Rubber top	£2.20
sh3000-031	31	Rivet	£1.20
sh3000-032	32	Fan	£117.60
sh3000-032x		Fan X	£117.60



## Frucosol SH-3000 Cutlery Dryer & Polisher Diagram

REF	NO	Frucosol SH-3000 Cutlery Dryer & Polisher	Price
sh3000-033	33	Heating element	£44.00
sh3000-033x		Heating element X	£88.00
sh3000-33x1		Klixon thermostat X	£66.00
sh3000-034	34	Switch	£8.80
sh3000-035	35	Fuse	£1.20
sh3000-036	36	Fuse holder	£6.60
sh3000-037	37	Front cover	POA
sh3000-038	38	Caged nut	POA
sh3000-039	39	Screw M6*20	£6.60
sh3000-040	40	Support arms	£308.00
sh3000-041	41	Tray	£30.80
sh3000-042	42	Network cable	£26.40
sh3000-043	43	Network cable cover	£13.20
sh3000-044	44	Screw M3*10	£1.20
sh3000-045	45	Security switch	£15.40
sh3000-046	46	Security micro support	£24.20
sh3000-000c		Cart	£880.00